
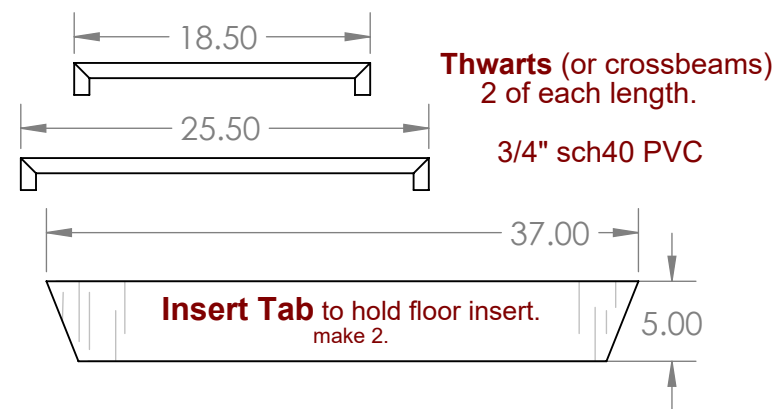


**Gunwales:** Place ~1" from nearest blue fold line. The first screw hole is 1" from edge and every 2" thereafter. 4.2mm thru hole for 5mm SS fasteners.

**PC - Pipe Clamp** rough location. (mirror the positions to the other side.) The seat back is about 12" from the center line which puts the paddler about 5" to the rear of the boat center line.

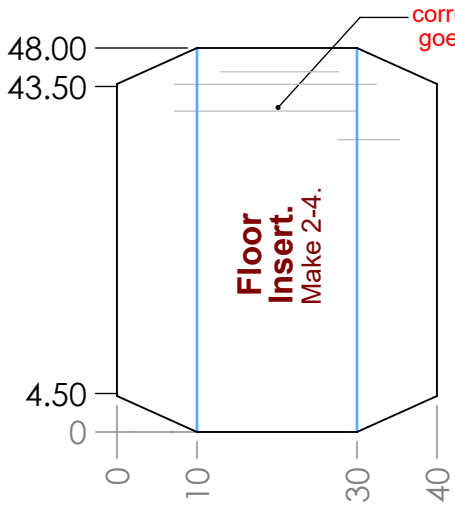

- TRIM LINES.
- - - Fold from the bottom fold lines.
- Fold from the top fold lines.
- - - Additional folds for transport.

**Disclaimer:**  
Experimental craft!  
Use at your own risk.