


APPLY TO **UNDERSIDE** OF LID
OBSERVE TEXT ORIENTATION ON TOP OF LID BEFORE APPLYING

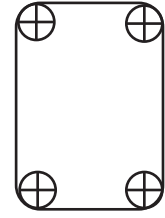

SIDE POWER PLUG OPENING